


# Adjusting temperature limits

Ceramic Disc Cartridge with Limit Stop for 1H Lav & Kitchen

G0092298/A507694N



Turn the cartridge so the position matches the pictures above.  
When the small arrow points to the center of the  $\pm$  range, the full range of temperature is available.

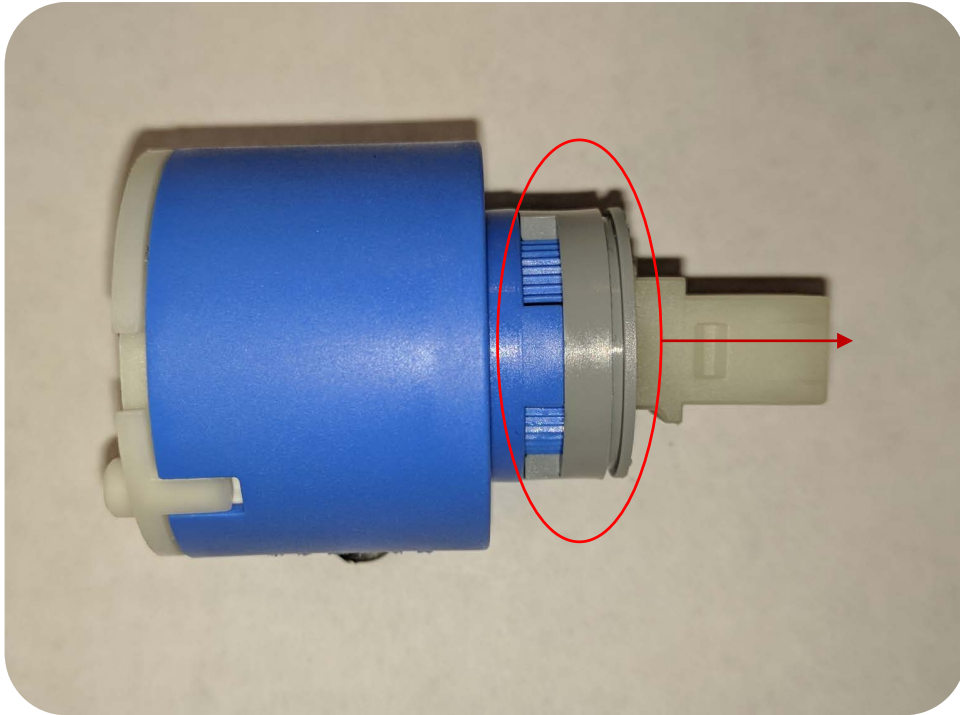

Pull the gray ring off to adjust the temperature limit.




Position the gray ring on the cartridge so the center of the +/- range is to the left or right of the small arrow.

Once the desired position is established, press the gray ring back on the cartridge.

**Original Max. Position**



**Adjusted Max. Position**

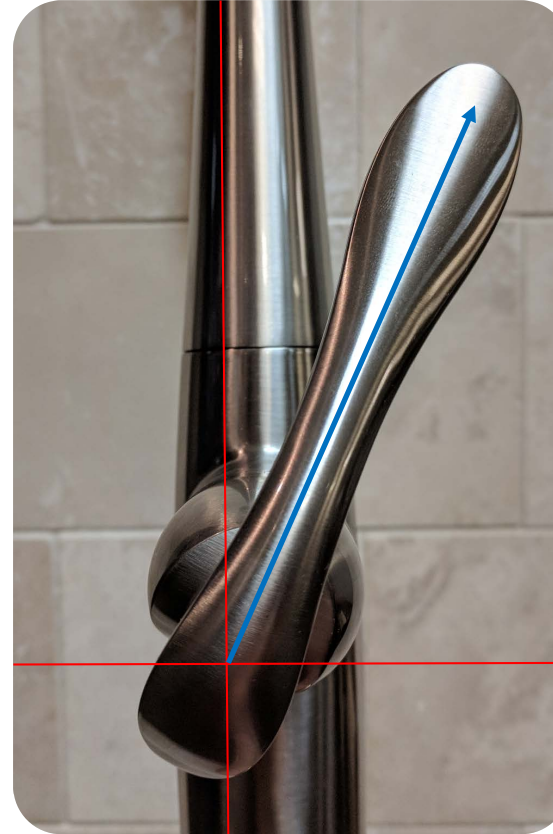

Once the handle is attached to the adjusted cartridge and installed to the faucet, there should be a difference in the range of motion of the handle, as well as the range of temperature available.